


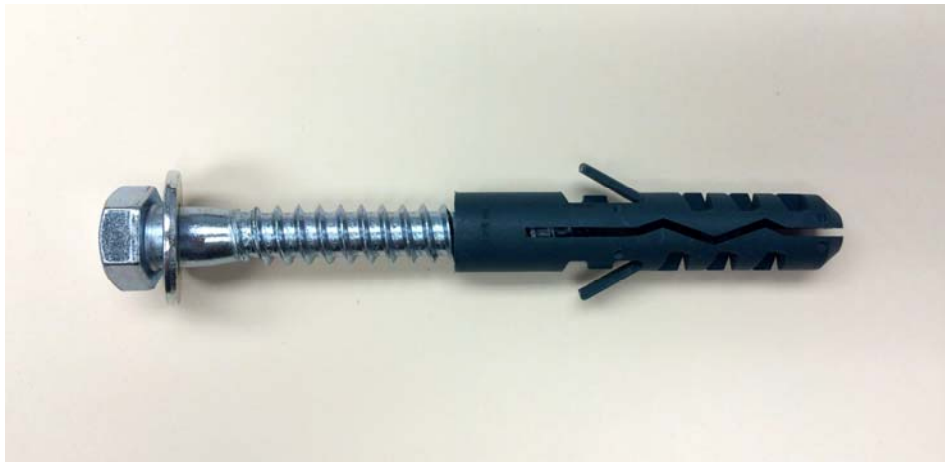

INSTALLATION INSTRUCTIONS FOR SHUR-FLEX® SURFACE MOUNT DELINEATOR

- Base is designed to be bolted or epoxied to surfaces.
- We recommend ½" x 3" Green Shur-Tite Nylon Plugs and ½" x 3 ½" hex lag bolts with washers. Using a **Commercial Hammer Drill** with an **Industrial 5/8" diameter bit**, Drill **4 ea - 5/8" diameter holes 3 ½" deep** using the Base as your pattern. **Blow the holes clean**. Insert the Green Nylon Plugs into the holes so that the top of the plugs are flush with the surface of the roadway (the top of the plugs must fit flush with the surface of the roadway). Position the Base over the holes with plugs in place and Screw the ½" x 3 ½" lag bolts with the washers into the nylon plug and tighten. Use a ¾" **socket** to tighten bolts snugly. A **commercial impact wrench** is recommended, however "DO NOT OVER TIGHTEN".
- *The 2 middle holes may be used if placing on a narrow headwall.
- Also, if you have a substantially clean surface a 2 part epoxy or a flexible bituminous can be used. Apply the epoxy or bituminous liberally into the pockets on the underside of base and onto the surface. Push the base down and allow the epoxy or bituminous to cure per manufacturers recommendation.



SHUR-TITE® PRODUCTS

PO Box 2283, Round Rock, TX 78680 Phone: 512-218-9500 Fax: 512-388-0417
www.shur-tite.com