



1920 North Weaver
Gainesville, TX 76240



512-218-9500




sales@shur-tite.com
www.shur-tite.com

SHUR-FLEX® SURFACE MOUNT

INSTALLATION INSTRUCTIONS


- Use supplied 5/8" green nylon plugs and 1/2" x 3-1/2" hex lag bolts with washers. Using a hammer drill with an industrial 5/8" diameter bit, drill 4 ea - 5/8" diameter holes 3-1/2" deep using the base as your pattern. Blow the holes clean.
- Insert the nylon plugs into the holes so the top of the plugs are flush with the surface of the roadway. Note: the top of the plugs must fit flush with the surface of the roadway.
- Position the base over the holes with plugs in place and screw the 1/2" lag bolts with the washers into the nylon plug and tighten. Use a 3/4" socket to tighten bolts snugly to a (torque rating of min 30 - max 38 ft lbs). An impact wrench is recommended, however "DO NOT OVER TIGHTEN".
- After securing the base, insert the post into the base and secure with the L-Pin.
- When installing the 7" x 10" fixed base, you may use the center mounting holes if the base is being placed on a narrow headwall.

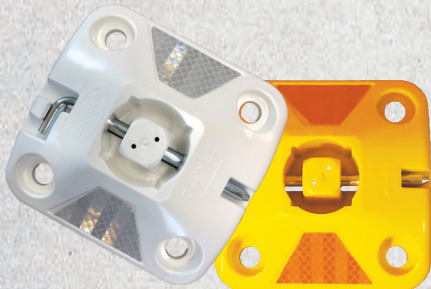

7" x 7" Fixed Base



Fixed Base Anchor Bolts

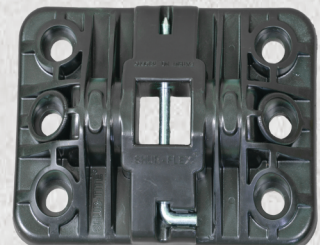

7" x 10" Fixed Base