POST REPLACEMENT INSTRUCTIONS

PULLING WEDGE

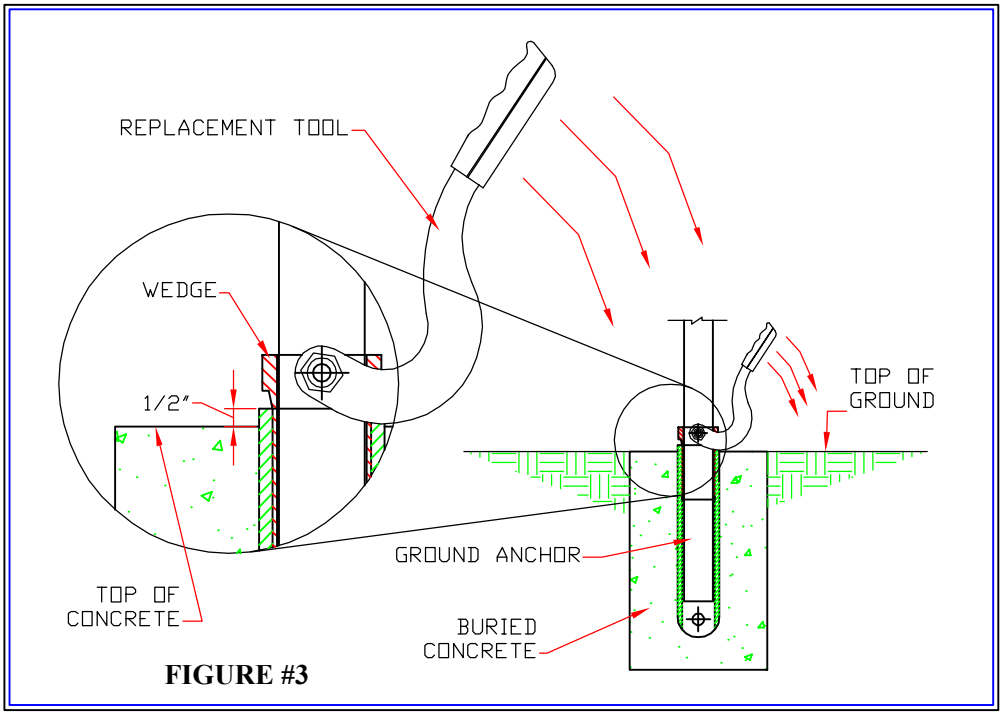

FIGURE #3

DRIVING WEDGE

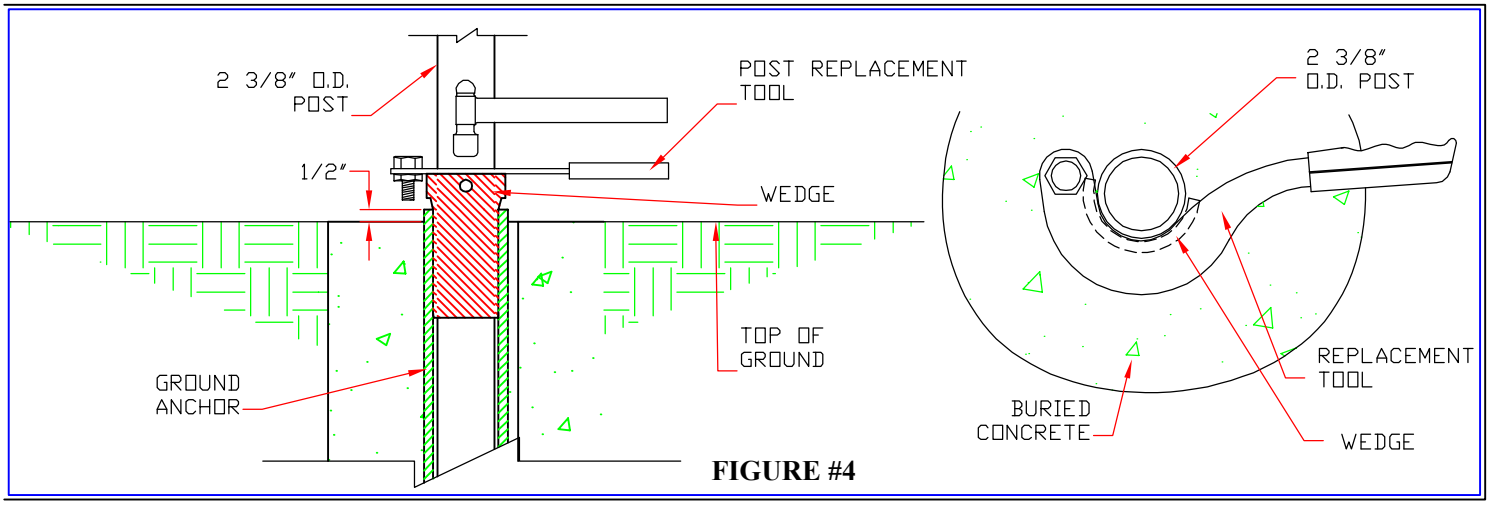

FIGURE #4

1. USE POST REPLACEMENT TOOL TO REMOVE WEDGE. (SEE FIG. #3)
2. REMOVE DAMAGED POST FROM PERMANENT GROUND ANCHOR.
3. INSERT NEW 2 3/8" O.D. POST INTO GROUND ANCHOR.
4. INSERT WEDGE BETWEEN POST AND GROUND ANCHOR.
5. DRIVE IN USING HAMMER AND FLAT SURFACE OF POST REPLACEMENT TOOL. (SEE FIG. #4)

SHUR-TITE® PRODUCTS
P. O. BOX 2283
ROUND ROCK, TEXAS 78680
(512) 218-9500